 
 


**EMERSON TABLE LAMP
ASSEMBLY INSTRUCTIONS**

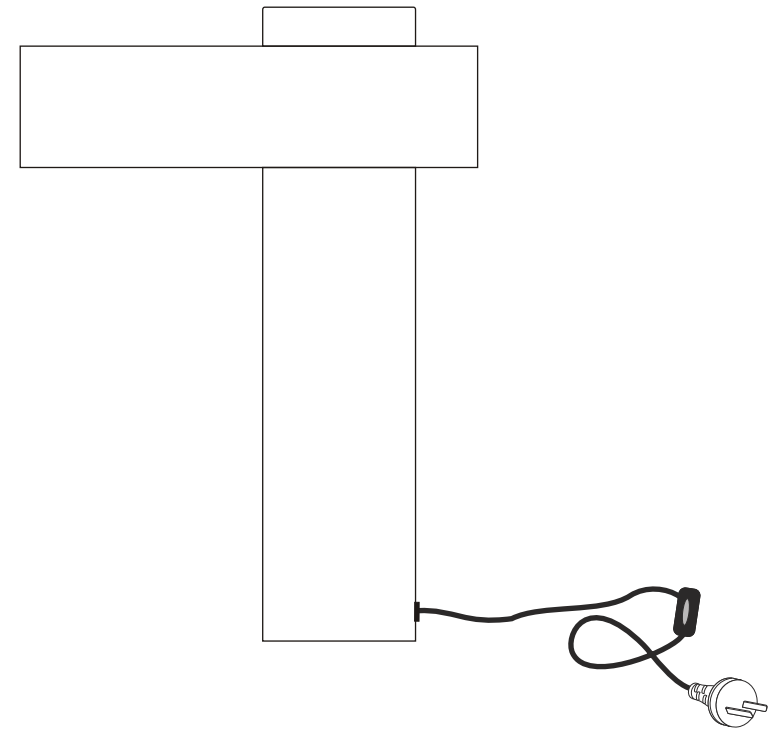

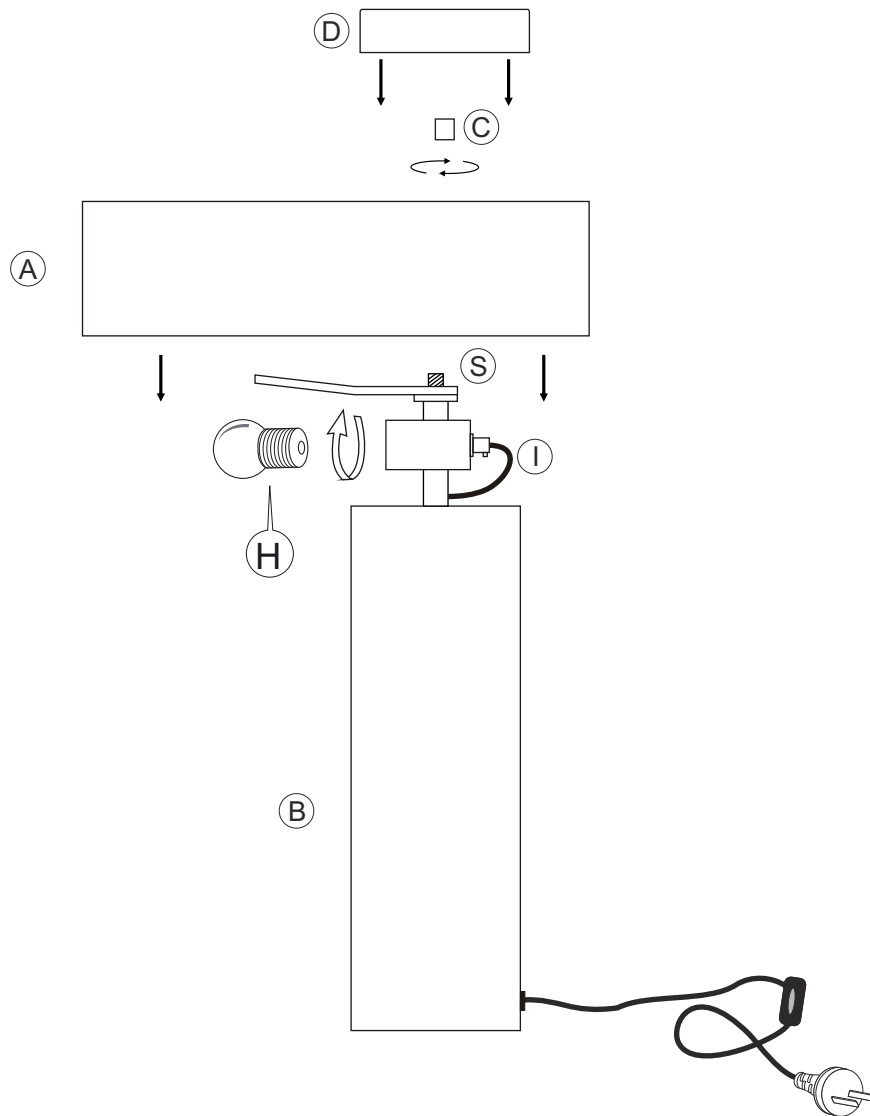

THIS ARTICLE REQUIRES ASSEMBLY

THE BOX INCLUDES:

- 1 Shade Fixture (A)
- 2 Lamp Base (B)
- 3 Top Nut (C)
- 4 Top Square (D)

- 1 Unscrew the top nut (C) from the head of the lamp base (B)
- 2 Carefully place the shade (A) over the lamp base (B) by aligning with the screw (S) & ensure that it is aligned so that the top nut (C) can be re-screwed
- 3 Slightly move the shade (A) to check if it has been adequately tightened. If it feels loose, screw in the top nut (C) until it is tight
- 4 Place the top square part (D) on the lamp shade in the correct position so it will stick itself to the lamp shade with the magnets
- 5 Secure the light bulb (H) E27 into the bulb holder (I)
- 6 The lamp is ready to use

Please note: Bulb is not included
Uses E27 **MAXIMUM 40W**

SAFETY WARNING

- To prevent risk of fire, do not use light bulbs greater than 40 Watt.
- If the external flexible cable or cord of the lamp needs to be replaced, it should only be replaced by a qualified electrician.