1780 HENRY DINING TABLE creative living / Kit Contents 1. Allen Bolt - 12 pcs 2. Washer - 12 pcs 3. Allen Key - 1 pc Ø35x8mm 2 1 TIGHTEN BY HAND ONLY DO NOT USE POWER TOOLS **IMPORTANT** 3 No power tools - Use hand tools only Do not overtighten screws 4

horgans.com.au