



# ASSEMBLY INSTRUCTIONS

A217- TASMA CABINET IN BONE INLAY WITH BLACK

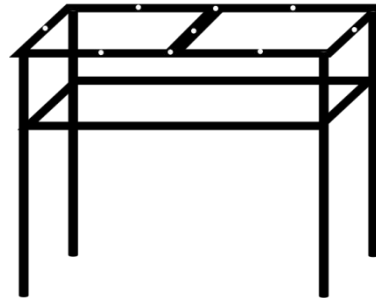


Part- A. (Top)

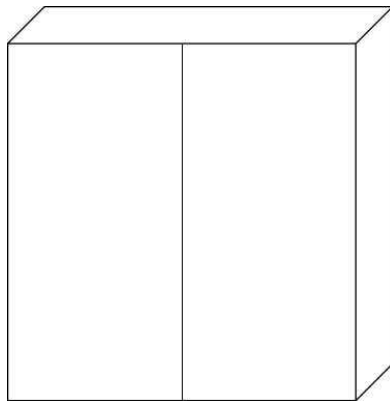

Part - B. (Base)


Hardware	Tool
	

**Step – 1:** After unpacking of the cabinet and stand (Both in separate cartons) you will find the above parts and hardware to fix the cabinet with the help of four persons and tool.

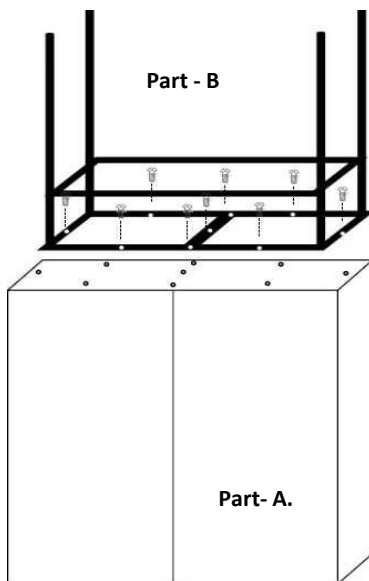

**Step – 2:** Place the part A on the soft covered floor with the help of four persons and align the holes of Part B, Place the base upside down on to the cabinet and loosely install the screws securing the base to the top, now fully tighten the all screws and fix the base.

**Step- 3:** With four persons help, turn the cabinet upright position for use (Assembled), ENJOY!

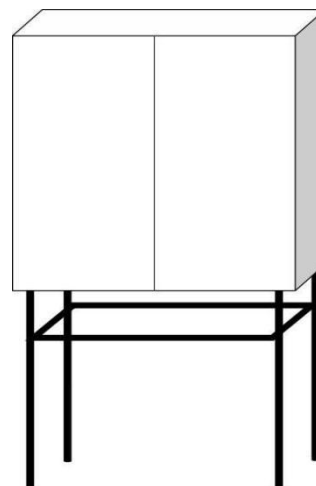

“Take care not to over tighten the screws”